









Doozy





Quick Start Guide

1.TURNING ON & OFF. Press the select button  and hold for three seconds a decimal point  will scroll across the display and ON  will be displayed. Repeat this process to switch off.

See page 10 for more detailed information or www.doo-zy.co.uk

2.CHOOSE A SWITCH OUTPUT PROGRAM. Press the select button  until the OUT  shows in the display. Use the up and down buttons  to select a program. Press the select button to confirm your choice.

See page 17 for more detailed information or www.doo-zy.co.uk

3. RECORD A SOUND. Press the select button  until REC  shows in the display, now push down the switch pad  and hold. Talk clearly around 20 cm away from the Mic . Press again to listen to your recording.



See page 10 for more detailed information or www.doo-zy.co.uk

4. VOLUME. Press the select button  until the display shows VOL  Use up and down buttons  to adjust the sound. 10 being the loudest. Press the select button to confirm your choice.

See page 11 for more detailed information or www.doo-zy.co.uk

5. LOCK & UNLOCK. To lock the buttons at the rear of the Doo-zy .

Press and hold the arrow down button  for more than two seconds

LOC  will be displayed. To unlock repeat the process, UNL  will display.

See page 9 for more detailed information or www.doo-zy.co.uk